



Everhot Operating Principles

This section provides a quick guide to connecting your cooker to your WiFi. A more in depth guide, and information on all of the features available once connected is available in the handbook supplied with your cooker. Please note connecting your controller to the internet is a strictly optional process and does not affect the core functionality of the controller.


Step 1:
Switch on the Wi-Fi Adapter. Press the WiFi button (Red), then use the up/down arrows in the Hot Plate window to change the setting to **ON**

The Wi-Fi Indicator Light will light up yellow/orange and begin to flash.

From a mobile device or Wi-Fi enabled PC, connect to the “Everhot_cooker” Wi-Fi network that will have appeared.




Connecting to Wi-Fi (page 2)

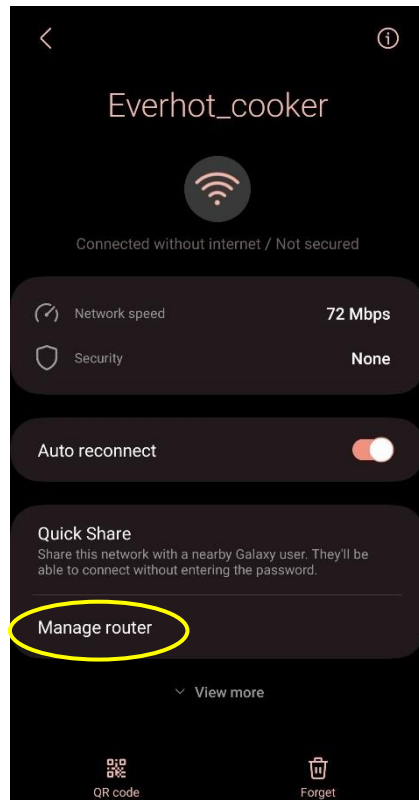


Tip You can scan the QR code below **when connected to the “Everhot_cooker” network** to go to the setup page too.



Log your controller into your Wi-Fi network

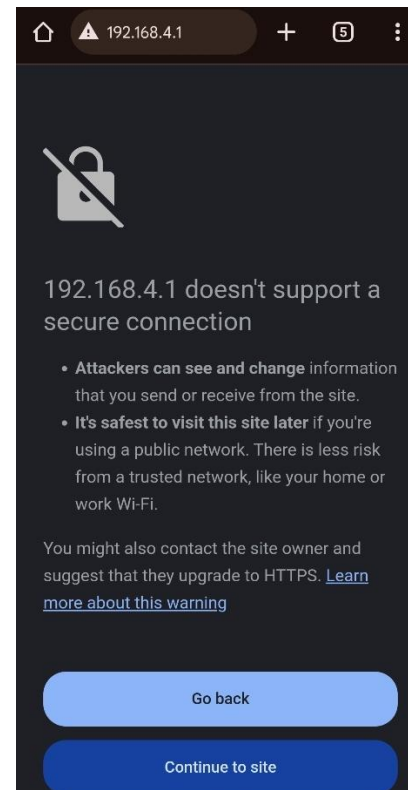

You may receive a secure connection warning such as this. You are connected to the cooker, not the internet, so it is fine to proceed.

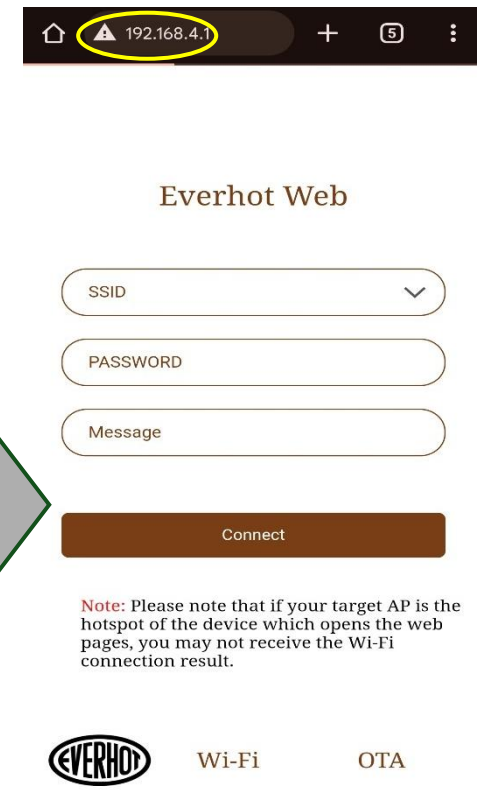

You will reach this webpage. Signing your controller into your Wi-Fi is described overleaf.

Select the “Manage Router” or similar option on the Wi-Fi network details page when connected to the “Everhot_cooker” network. Alternatively use a web browser to go to “http://192.168.4.1”. **You must be connected to “Everhot_cooker” and not your normal Wi-Fi network.**



Connecting to WiFi (page 3)

Everhot Web

SSID

PASSWORD

Message

Connect

Note: Please note that if your target AP is the hotspot of the device which opens the web pages, you may not receive the Wi-Fi connection result.

Everhot Web

EverHot

connecting

Connect

Note: Please note that if your target AP is the hotspot of the device which opens the web pages, you may not receive the Wi-Fi connection result.

Everhot Web

EverHot

Connection succeeded, This page will be closed in 4 seconds.

Connect

Note: Please note that if your target AP is the hotspot of the device which opens the web pages, you may not receive the Wi-Fi connection result.

EVERHOT Wi-Fi OTA

- Enter the name of your Wi-Fi network in the “SSID” box (blue).
- You can get a list of available networks to select from rather than typing the name in by pressing the arrow (Red).
- Put your Wi-Fi password into the “Password” box. This is often on the back of your router.
- Click “Connect” (Orange) once the information is filled in to connect to your Wi-Fi with your cooker.

The cooker will attempt to connect to your Wi-Fi network.

Once connected to your Wi-Fi network, call Everhot on 01453 890018 to activate your cooker and make it available to connect to your Everhot App. You will need your controlbox’s “Device ID” number – see your manual for how to obtain this.

The webpage will provide a message on successful connection as shown, or failure. If the connection fails, try entering the password again, as it may have been miskeyed when entered. Make sure to connect back to your normal Wi-Fi network afterwards. Refer to the user manual for further information about setting up your cooker.